

FAX MACHINES
*** SAFETY BULLETIN ***

POTENTIAL HAZARDS

- ELECTRICAL SHOCK
- BURNS
- FIRE
- TONER EXPOSURE

- CLEARING JAMS MAY EXPOSE YOU TO **HOT COMPONENTS, MOVING PARTS, SHARP EDGES, PINCH POINTS AND EXPOSED ELECTRICAL PARTS. DISCONNECT FROM POWER** AND ALLOW TO COOL BEFORE CLEARING JAMS.
- THE DRUM CONTAINS TONER. USE CARE WHEN HANDLING AND WASH HANDS IMMEDIATELY IF EXPOSED.
- DO NOT SPILL LIQUIDS IN OR ALLOW FOREIGN OBJECTS TO ENTER MACHINE.
- KEEP VENTILATION PORTS CLEAR.
- ANY USE OF OR ADJUSTMENTS TO EQUIPMENT OTHER THAN AS RECOMMENDED IN THE USER'S MANUAL MAY EXPOSE YOU TO LASER RADIATION.
- DISCONNECT ALL CABLES IF:
 - Liquid is spilled inside
 - The machine produces smoke, odours or unusual noises
 - The power cord is frayed or damaged
 - Servicing or maintenance is to be performed.
- OZONE FILTERS, IF PRESENT, SHOULD BE CLEANED PERIODICALLY.
- DO NOT TOUCH THE ROLLERS AT THE PAPER EXIT.
- DO NOT USE PHONE OR FAX DURING AN ELECTRICAL STORM.
- ROUTINELY CHECK INTEGRITY OF ELECTRICAL CONNECTIONS AND CLEAN DUST FROM PINS AND VENTS.